

## Flow Control Valve Installation Instructions

**GLENDO**  
CORPORATION

P.O. Box 1153  
900 Overlander Road  
Emporia, KS 66801 USA

Toll Free: 1-800-835-3519  
Phone: 620-343-1084  
Fax: 620-343-9640  
e-mail: glendo@glendo.com

1. Disconnect the air supply from the HandWorker before installing the flow control valve.
2. Remove tube from elbow coupling located at the lower part of the cylinder by depressing the collar into the fitting and pulling the tubing out. (See illustration A)
3. Install the tubing you just removed into the open end of the flow control valve.
4. Then install the short tube that is already in the valve into the elbow coupling at the lower part of the cylinder. (See illustration B)
5. Reconnect air supply to the HandWorker.
6. Operate HandWorker while adjusting the flow control valve until set to desired speed.

Lit #101

